



Motor Starters Type MN

Direct-On-Line Starters Star-Delta Starters

About us

Larsen & Toubro is a technology-driven company that infuses engineering with imagination. The Company offers a wide range of advanced solutions in the field of Engineering, Construction, Electrical & Automation, Machinery and Information Technology.

L&T Switchgear, a part of the Electrical & Automation business, is India's largest manufacturer of low voltage switchgear, with the scale, sophistication and range to meet global benchmarks. With over five decades of experience in this field, the Company today enjoys a leadership position in the Indian market with a growing international presence.

It offers a complete range of products including powergear, controlgear, industrial automation, building electricals & automation, reactive power management, energy meters, and protective relays. These products conform to Indian and International Standards.



Switchgear Factory, Mumbai



Switchgear Factory, Ahmednagar

Salient Features

- Conforms to IS/IEC 60947-4-1 & IEC 60947-4-1
- Built-in single phasing protection
- In Star Delta Starters, Star contactor has same rating as Hold-on & Delta
- Suitable for Industrial & Rural applications
- Terminal block for ease of termination
- Starter enclosure with IP54⁰ of protection

Applications

MN starters are available in following versions:

- Direct-On-Line starter
- Fully automatic Star-Delta (FASD) starter

All MN DOL & Star-Delta starters are suitable for 3-Phase Squirrel Cage motors. MN DOL starters are available in following ratings:

- MN 16 DOL-upto 10 HP (7.5kW)
- MN 25 DOL-upto 15 HP (11kW)
- MN 32 DOL-upto 20 HP (15kW)
- MN 45 DOL-upto 30 HP (22.5kW)
- MN 65 DOL-upto 45 HP (33.5kW)

MN Star-Delta starters are available in following ratings:

- MN 16 Star-Delta-upto 15 HP (11kW)
- MN 25 Star-Delta-upto 25 HP (18.5kW)
- MN 32 Star-Delta-upto 35 HP (26kW)
- MN 45 Star-Delta-upto 50 HP (37.5kW)
- MN 65 Star-Delta-upto 75 HP (55kW)
- MN 80 Star-Delta-upto 90 HP (67.5kW)
- MN 110 Star-Delta-upto 125 HP (90kW)
- MN 140 Star-Delta-upto 175 HP (130kW)

Construction

MN starters consist of MNX contactors & MN relays. The relay is directly mounted on the contactor. The colour of the sheet steel enclosure is two-toned. The box is powder coated and grey in colour. The cover is powder coated with ivory colour. The push button is flush mounted in an enclosure cover, which has been given an altogether 'new look'.

Operational Details

Relay Setting

A screwdriver is used to set the relay indicator (which is on the dial) to the full load current setting. This ensures optimum protection under Overload and Single Phasing of the motor. In case of Star-Delta Starters, the relay must be set at the values $I_n / \sqrt{3}$ (0.58 I_n) as given in the selection table, since the connected relay carries only the phase current in Motors having Delta connected winding.

MN DOL Starters

- MN 16, 25, 32, 45, 65 DOL starters incorporate type MNX contactors
- MN 16, 25, 32 DOL starters incorporate MN 2 relays
- MN 45, 65 DOL starters incorporate MN 5 relays

MN Star-Delta Starters

MN Star-Delta Starters are available only in fully automatic version.

MN 16, 25, 32, 45, 65, 80, 110, 140 Star-Delta starters incorporate type MNX contactors.

- MN 16, 25, 32, Star-Delta starters incorporate MN 2 relays
- MN 45, 65, 80, 110, Star-Delta starters incorporate MN 5 relays
- MN 140 Star-Delta starters incorporate MN 12L relays

In case of FASD starter, motor gets connected in Star connection, when the green button is pressed. An electronic timer automatically performs the change-over function from Star to Delta.



Features & Benefits

Single Phasing Protection

MN relays having phase failure sensitive tripping mechanism provides reliable protection against single phasing & overload conditions. MN relays are compensated for variation in ambient temperature from -5°C to 55°C .

IP54 degree of protection

Corrosion resistant powder coated enclosure with IP 54 degree of protection makes MN starters most suitable for chemical factories, polluted industrial and dusty agricultural environments.

Terminal Block

MN Star-Delta starters are provided with terminal block with proper terminal marking for ease of wiring. Terminal block can accommodate both aluminum & copper cables.

Base Plate Mounting

MN Star-Delta starters are mounted on base plate that can absorb vibrations and it makes MN starters maintenance friendly.

Electronic Timer

MN Fully Automatic Star-Delta starters are provided with electronic timer for high repeat accuracy.

Trip Test Facility

This facility enables the user to manually check the operation of the trip mechanism. Move the trip slide in the direction shown on the relay. The relay trips with an audible 'Click' sound, indicating that the trip mechanism is in good working order.

Off / Reset Push-Button

The relay will trip in case of overloads or single phasing conditions.

Simultaneously 'Alarm Contact' (97-98) will close. The motor cannot be restarted until the relay has been reset. To reset the relay, allow the bimetals to cool down sufficiently & push this button to reset the trip contact (95-96).

If the relay is in reset condition, pressing this push-button will open 'Trip Contact'. But now the alarm contact will not close. This indicates healthy operation of the relay mechanism. The trip contact will again close when this button is released.

Auto-Manual Reset Switch

There are two modes of reset available : Manual and Auto. By default the relay is in the Manual reset mode and can be converted to Auto reset mode by moving the switch to Auto position marked on the label.

Chart for MN DOL starters

Type	Maximum Motor Rating at 415V, 3 Ø, 50Hz		Approx. Full Load Current In (A)	Relay Range (A)	Relay	Contactor	Recommended Back-up HRC Fuse		Switch Disconnector Fuse Unit
	HP	kW					Type	Rating (A)	
MN 16 DOL	2	1.5	3.5	3 - 5	MN 2	MNX 18	HF	16	FN 32
	2.5	1.8	4.8	3 - 5			HF	16	FN 32
	3	2.2	5	4.5 - 7.5			HF	16	FN 32
	4	3	6.2	4.5 - 7.5			HF	20	FN 32
	5	3.7	7.5	6 - 10			HF	20	FN 32
	6	4.5	9	6 - 10			HF	25	FN 32
	7.5	5.5	11	9 - 15			HF	32	FN 32
	10	7.5	14	9 - 15			HF	32	FN 32
MN 25 DOL	7.5	5.5	11	9 - 15	MN 2	MNX 25	HF	32	FN 32
	10	7.5	14	9 - 15			HF	32	FN 32
	12.5	9.3	18	14 - 23			HF	50	FN 63
	15	11	21	14 - 23			HF	63	FN 63
MN 32 DOL	15	11	21	20 - 33	MN 2	MNX 32	HF	63	FN 63
	17.5	13	24	20 - 33			HF	63	FN 63
	20	15	28	20 - 33			HN/100	63	FN 100
MN 45 DOL	25	18.5	35	30 - 50	MN 5	MNX 45	HN/100	80	FN 100
	30	22.5	40	30 - 50			HN/100	80	FN 100
MN 65 DOL	30	22.5	40	30 - 50	MN 5	MNX 70	HN/100	80	FN 100
	35	26	47	30 - 50			HN/100	100	FN 100
	40	30	55	45 - 75			HN/100	100	FN 100
	45	33.5	60	45 - 75			HN/100	100	FN 100

Selection Chart for MN DOL Starters

Chart for MN Star-Delta starters

Type	Maximum Motor Rating at 415V, 3 Ø, 50Hz		Approx. Full Load Current In (A)	Phase Current $i_n / \sqrt{3}$	Relay Range (A)	Relay	Contactor	Recommended Back-up HRC Fuse		Switch Disconnector Fuse Unit
	HP	kW						Type	Rating (A)	
MN 16 FASD	10	7.5	14	8.08	6 - 10	MN 2	MNX 18	HF	20	FN 32
	12.5	9.3	18	10.4	9 - 15			HF	32	FN 32
	15	11	21	12.1	9 - 15			HF	32	FN 32
MN 25	20	15	28	16.2	14 - 23	MN 2	MNX 25	HF	40	FN 63
	25	18.5	35	20.2	14 - 23			HF	50	FN 63
MN 32 FASD	30	22.5	40	23	20 - 33	MN 2	MNX 32	HF	63	FN 63
	35	26	47	27	20 - 33			HN/00	63	FN 100
MN 45 FASD	40	30	55	31.8	30 - 50	MN 5	MNX 45	HN/00	63	FN 100
	45	33.5	60	34.6	30 - 50			HN/00	80	FN 100
	50	37.5	66	38.2	30 - 50			HN/00	80	FN 100
MN 65 FASD	60	45	80	46.2	45 - 75	MN 5	MNX 70	HN/00	100	FN 100
	65	48.5	87	50	45 - 75			HN/00	100	FN 100
	70	52	94	54.5	45 - 75			HN/00	125	FN 125
	75	55	100	57.5	45 - 75			HN/00	125	FN 125
MN 80 FASD	90	67.5	120	69.2	45 - 75	MN 5	MNX 80	HN/0	160	Fn 200
MN 110 FASD	100	75	135	77.9	66 - 110	MN 5	MNX 110	HN/0	160	FN 200
	125	90	165	95	66 - 110			HN/0	200	FN 200
MN 140 FASD	150	110	200	115	90 - 150	MN 12L	MNX 140	HN/1	250	FN 250
	175	130	230	132.8	90 - 150			HN/1	250	FN 250

Selection Chart for MN Star-Delta Starters

Ordering Information - MN DOL Starter*

Example: MN 16 DOL - 240V with relay range 9-15 A Ordering Information - SS94015BOBO

Starter Type	Version	MN 16	MN 25	MN 32	MN 45	MN 65
Cat. No.		SS94351	SS94352	SS94353	SS94017	SS94018
Rated control voltage (Us) V _{AC}	Relay Range					
240	2.0 - 3.3	DOQO	—	—	—	—
	3.0 - 5.0	—	—	—	—	—
	4.5 - 7.5	—	—	—	—	—
	6.0 - 10	—	BOBO	—	—	—
	9.0 - 15	—	BODO	—	—	—
	14 - 23	—	—	BOEO	—	—
	20 - 33	—	—	—	—	—
	30 - 50	—	—	—	—	—
	45 - 75	—	—	—	—	—
360	3.0 - 5.0	COSO	—	—	—	—
	4.5 - 7.5	COUO	—	—	—	—
	6.0 - 10	COVO	—	—	—	—
	9.0 - 15	COBO	COBO	—	—	—
	14 - 23	—	CODO	—	—	—
	20 - 33	—	—	COEO	—	—
	30 - 50	—	—	—	COGO	—
	45 - 75	—	—	—	—	COJO
415	3.0 - 5.0	DOSO	—	—	—	—
	4.5 - 7.5	DOUO	—	—	—	—
	6.0 - 10	DOVO	—	—	—	—
	9.0 - 15	DOBO	DOBO	—	—	—
	14 - 23	—	DODO	DODO	—	—
	20 - 33	—	—	DOEO	—	—
	30 - 50	—	—	—	DOGO	DOGO
	45 - 75	—	—	—	—	DOJO






Ordering Information - MN Star-Delta Starter*

Example: MN 16 SASD - 360V with relay range 9-15 A Ordering Information - SS94019COBO

Starter Type	Version	MN 16	MN 25	MN 32	MN 45	MN 65	MN 80	MN 110	MN 140
Cat. No.	FASD	SS94362	SS94364	SS94366	SS94021	SS94022	SS94705	SS94706	SS94707
Rated control voltage (Us) V _{AC}	Relay Range								
360	6.0 - 10	COVO	—	—	—	—	—	—	—
	9.0 - 15	COBO	—	—	—	—	—	—	—
	14 - 23	—	CODO	DODO	—	—	—	—	—
	20 - 33	—	—	COEO	—	—	—	—	—
	30 - 50	—	—	—	—	—	—	—	—
	45 - 75	—	—	—	—	—	—	—	—
	66 - 110	—	—	—	—	—	—	—	—
	90 - 150	—	—	—	—	—	—	—	—
415	6.0 - 10	DOVO	—	—	—	—	—	—	—
	9.0 - 15	DOBO	—	—	—	—	—	—	—
	14 - 23	—	DODO	—	—	—	—	—	—
	20 - 33	—	—	DOEO	—	—	—	—	—
	30 - 50	—	—	—	DOGO	—	—	—	—
	45 - 75	—	—	—	—	DOJO	DOJO	—	—
	66 - 110	—	—	—	—	—	—	DOKO	—
	90 - 150	—	—	—	—	—	—	—	DOMO

* Note: These are the standard combinations of relay and contactor. Any other combinations can be supplied on request.

Overall Dimensions

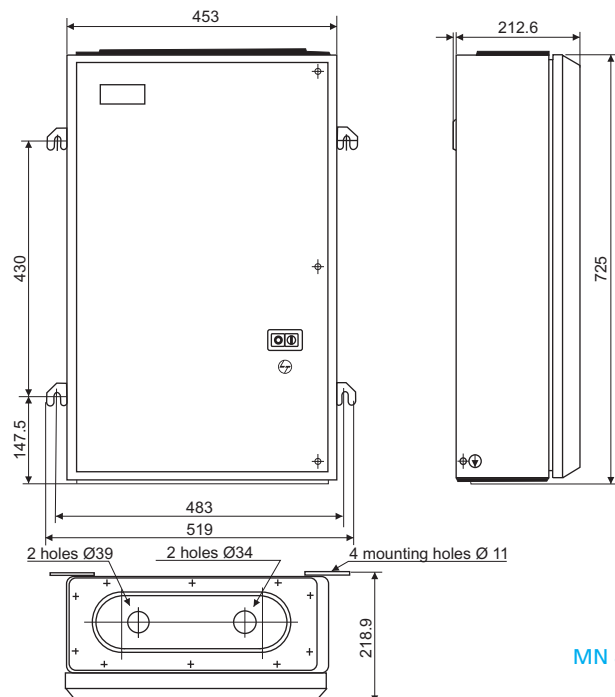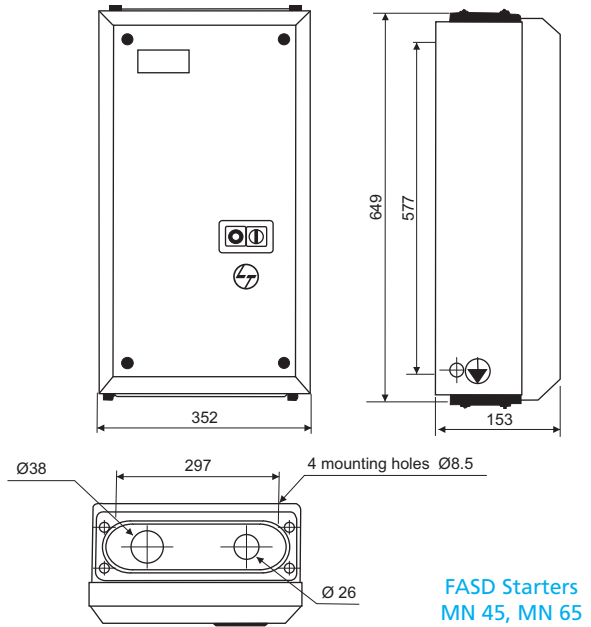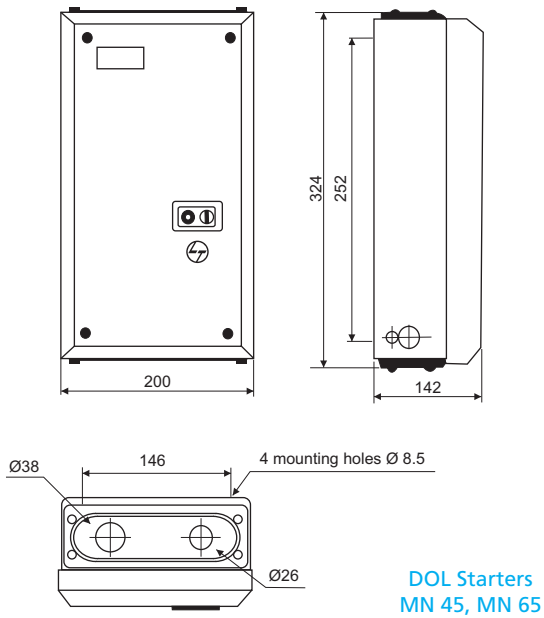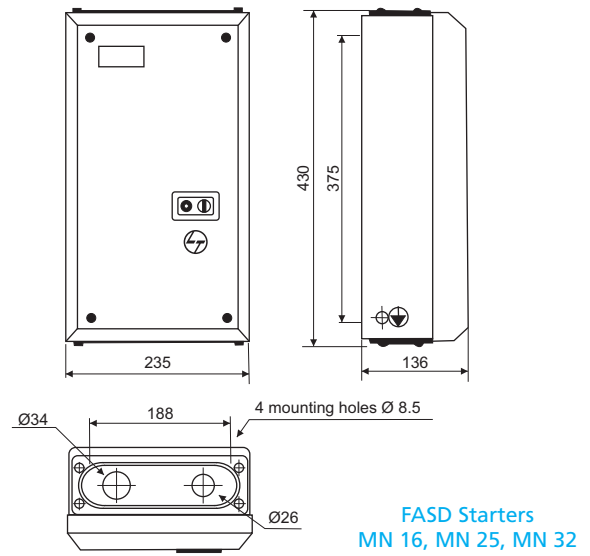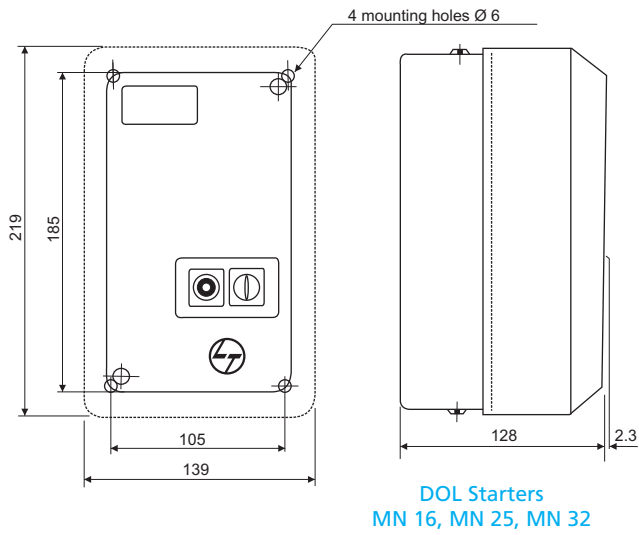

Electrical Standard Products (ESP) Branch Offices:

REGISTERED OFFICE AND HEAD OFFICE

L&T House, Ballard Estate
P. O. Box 278
Mumbai 400 001
Tel: 022-67525656
Fax: 022-67525858
Website: www.Larsentoubro.com

ELECTRICAL STANDARD PRODUCTS (ESP)

501, Sakar Complex I
Opp. Gandhigram Rly. Station
Ashram Road
Ahmedabad 380 009
Tel: 079-66304006-11
Fax: 079-66304025
e-mail: esp-ahm@LNTEBG.com

38, Cubbon Road, P. O. Box 5098
Bangalore 560 001
Tel: 080-25020100 / 25020324
Fax: 080-25580525
e-mail: esp-blr@LNTEBG.com

131/1, Zone II
Maharana Pratap Nagar
Bhopal 462 011
Tel: 0755-3080511 / 05 / 08 / 13 / 17 / 19
Fax: 0755-3080502
e-mail: esp-bho@LNTEBG.com

Plot No. 559, Annapurna Complex
Lewis Road
Bhubaneswar 751 014
Tel: 0674-6451342, 2436696
Fax: 0674-2537309
e-mail: esp-bbi@LNTEBG.com

SCO 32, Sector 26-D
Madhya Marg, P. O. Box 14
Chandigarh 160 019
Tel: 0172-4646840, 4646853
Fax: 0172-4646802
e-mail: esp-chd@LNTEBG.com

L&T Construction Campus
TC-1 Building, II Floor
Mount-Poonamallee Road
Manapakkam
Chennai 600 089
Tel: 044-2270 6800
Fax: 044-22706940
e-mail: esp-maa1@LNTEBG.com

67, Appuswamy Road
Post Bag 7156
Opp. Nirmala College
Coimbatore 641 045
Tel: 0422-2588120 / 1 / 5
Fax: 0422-2588148
e-mail: esp-cbe@LNTEBG.com

Khairasol, Degaul Avenue
Durgapur 713 212
Tel: 2559848, 2559849, 2559844
Fax: 0343-2553614
e-mail: esp-dgp@LNTEBG.com

Milanpur Road, Bamuni Maidan
Guwahati 781 021
Tel: 0361-2550562 / 65
Fax: 0361-2551308
e-mail: hazrasudipto@LNTEBG.com

II Floor, Vasantha Chambers
5-10-173, Fateh Maidan Road
Hyderabad 500 004
Tel: 040-67015052
Fax: 040-23296468
e-mail: esp-hyd@LNTEBG.com

Monarch Building, 1st Floor
D-236 & 237, Amrapali Marg
Vaishali Nagar
Jaipur 302 021
Tel: 0141-4385914 to 18
Fax: 0141-4385925
e-mail: esp-jai@LNTEBG.com

Akashdeep Plaza, 2nd Floor
P. O. Golmuri
Jamshedpur 831 003
Jharkhand
Tel: 0657-2312205 / 38
Fax: 0657-2341250
e-mail: esp-jam@LNTEBG.com

Skybright Bldg; M. G. Road
Ravipuram Junction, Ernakulam
Kochi 682 016
Tel: 0484-4409420 / 4 / 5 / 7
Fax: 0484-4409426
e-mail: esp-cok@LNTEBG.com

3-B, Shakespeare Sarani
Kolkata 700 071
Tel: 033-44002572 / 3 / 4
Fax: 033-22821025 / 7587
e-mail: esp-ccu@LNTEBG.com

A28, Indira Nagar, Faizabad Road
Lucknow 226 016
Tel: 0522-4929905/04
Fax: 0522-2311671
e-mail: esp-Lko@LNTEBG.com

No: 73, Karpaga Nagar, 8th Street
K. Pudur
Madurai 625 007
Tel: 0452-2537404, 2521068
Fax: 0452-2537552
e-mail: esp-mdu@LNTEBG.com

EBG North Wing Office-Level 2
Gate 7, Powai Campus
Mumbai 400 072
Tel: 022-67052874 / 2737 / 1156
Fax: 022-67051112
e-mail: esp-bom@LNTEBG.com

12, Shivaji Nagar
North Ambazari Road
Nagpur 440 010
Tel: 0712-2260012 / 3
Fax: 0712-2260020 / 30
e-mail: esp-nag@LNTEBG.com

32, Shivaji Marg
P. O. Box 6223
New Delhi 110 015
Tel: 011-41419514 / 5 / 6
Fax: 011-41419600
e-mail: esp-del@LNTEBG.com

L&T House
P. O. Box 119
191/1, Dhole Patil Road
Pune 411 001
Tel: 020-26164048
Fax: 020-26164048/26164910
e-mail: esp-pnq@LNTEBG.com

Crystal Tower, Plot No. 606/1
4th Floor, G. E. Road
Telibandha
Raipur - 492 006
Tel: 0771-4283214
e-mail: esp-raipur@LNTEBG.com

3rd Floor
Vishwakarma Chambers
Majura Gate, Ring Road
Surat 395 002
Tel: 0261-2473726
Fax: 0261-2477078
e-mail: esp-sur@LNTEBG.com

Radhadaya Complex
Old Padra Road
Near Charotar Society
Vadodara 390 007
Tel: 0265-6613610 / 1 / 2
Fax: 0265-2336184
e-mail: esp-bar@LNTEBG.com

48-8-16, Dwarakanagar
Visakhapatnam 530 016
Tel: 0891 670 1125 to 30
Fax: 0891 670 1139
e-mail: esp-viz@LNTEBG.com

Product improvement is a continuous process. For the latest information and special applications, please contact any of our offices listed here.



Larsen & Toubro Limited Electrical Standard Products
Powai Campus, Mumbai 400 072
Customer Interaction Center (CIC)
BSNL / MTNL (toll free) : 1800 233 5858
Reliance (toll free) : 1800 200 5858
Tel : 022 6774 5858, Fax : 022 6774 5859
E-mail : cic@LNTEBG.com Website : www.LNTEBG.com

Registered Office: L&T House, N. M. Marg, Ballard Estate, Mumbai 400 001, INDIA

SP 01936 R